



# 450 Series Euro style lockcase

## Fitting template

For locks fitted with both cylinder and lever handles, drill both sets of holes (upper and lower). Drill lower set only for deadlocks. Drill upper set only for latches. For bathroom locks see below.

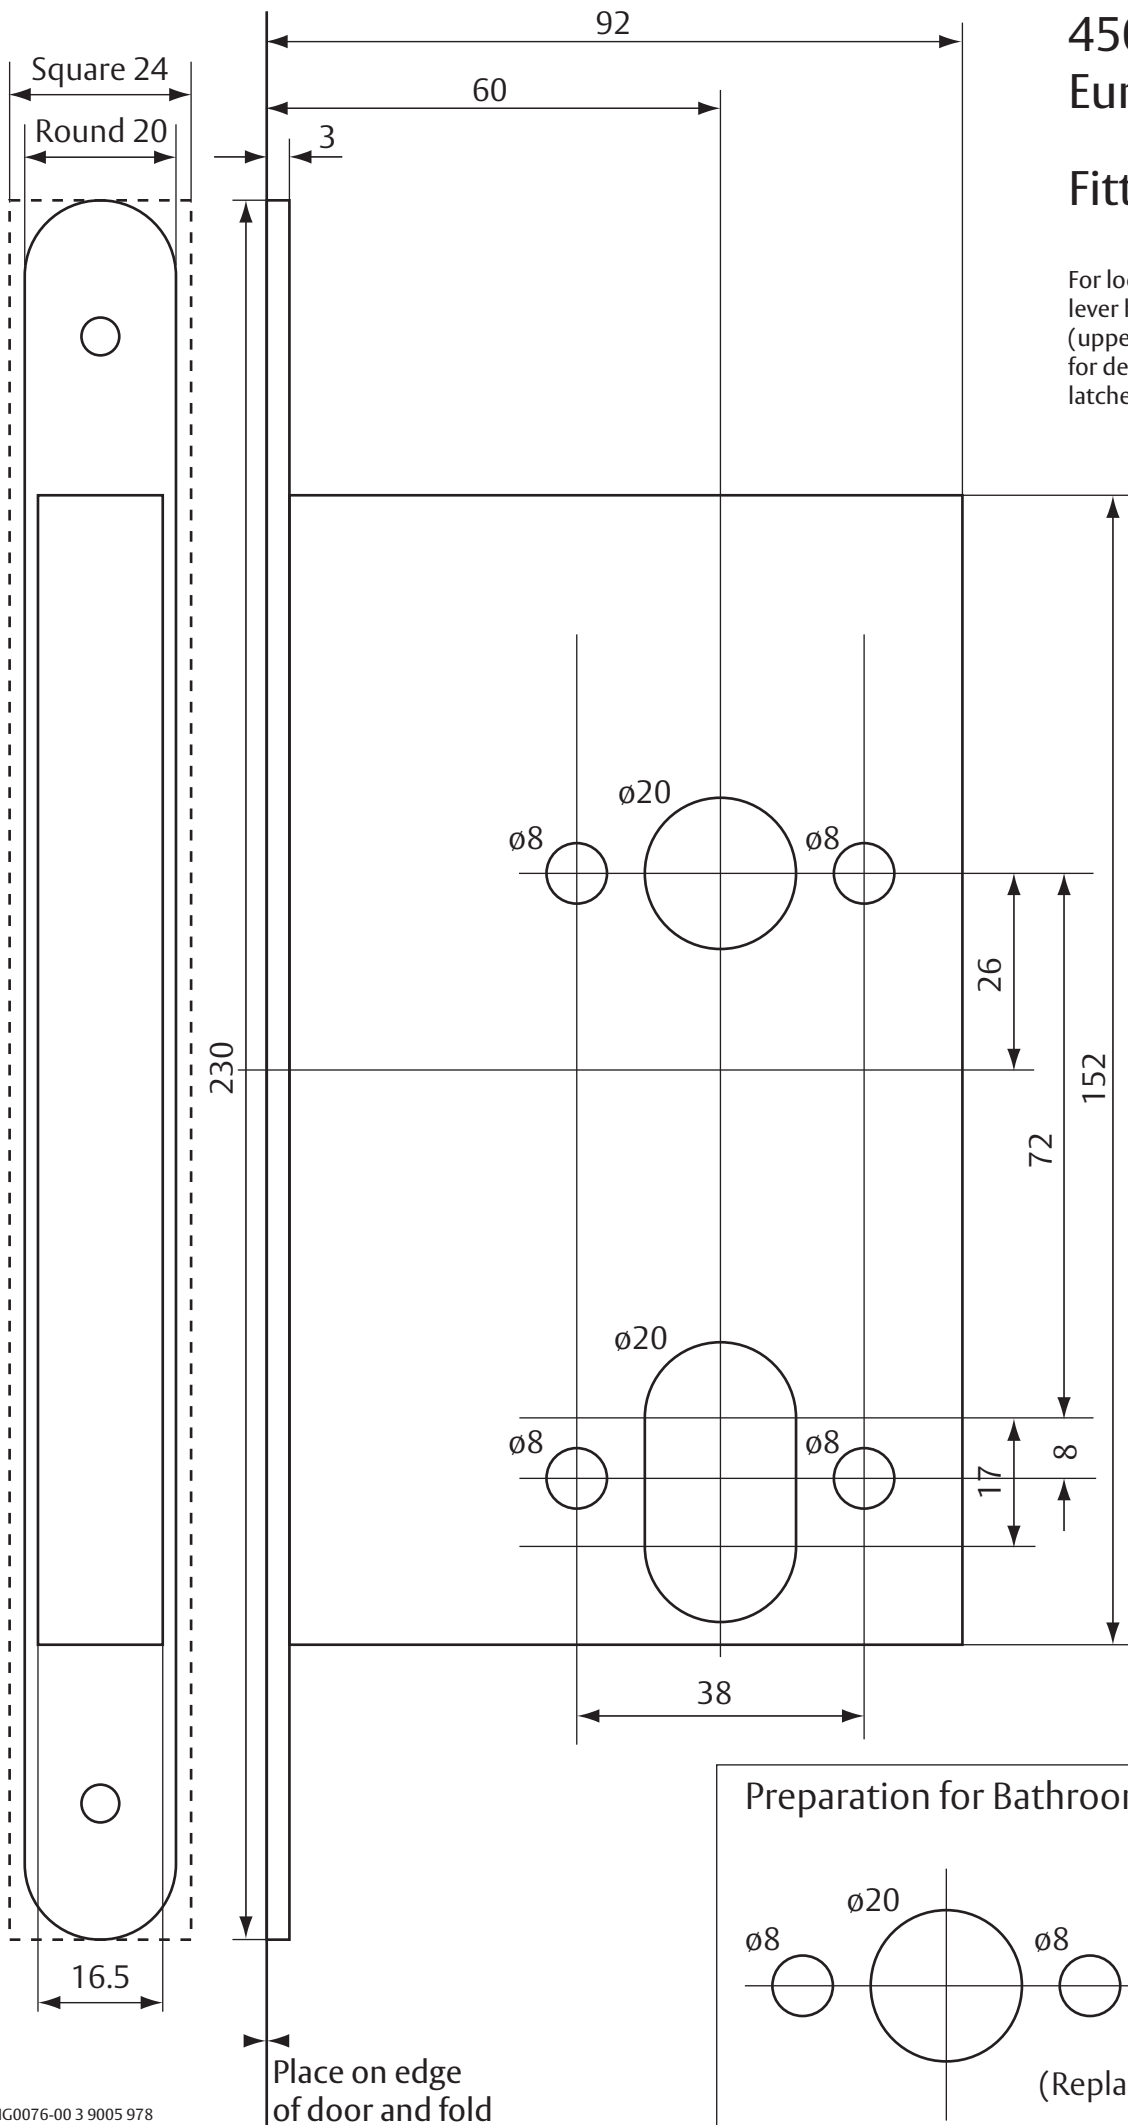

### Preparation for Bathroom Furniture

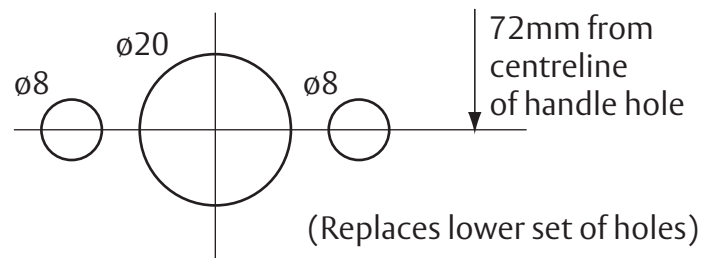


# 450 Series

## Euro style lockcase

### Fitting template

For locks fitted with both cylinder and lever handles, drill both sets of holes (upper and lower). Drill lower set only for deadlocks. Drill upper set only for latches. For bathroom locks see below.

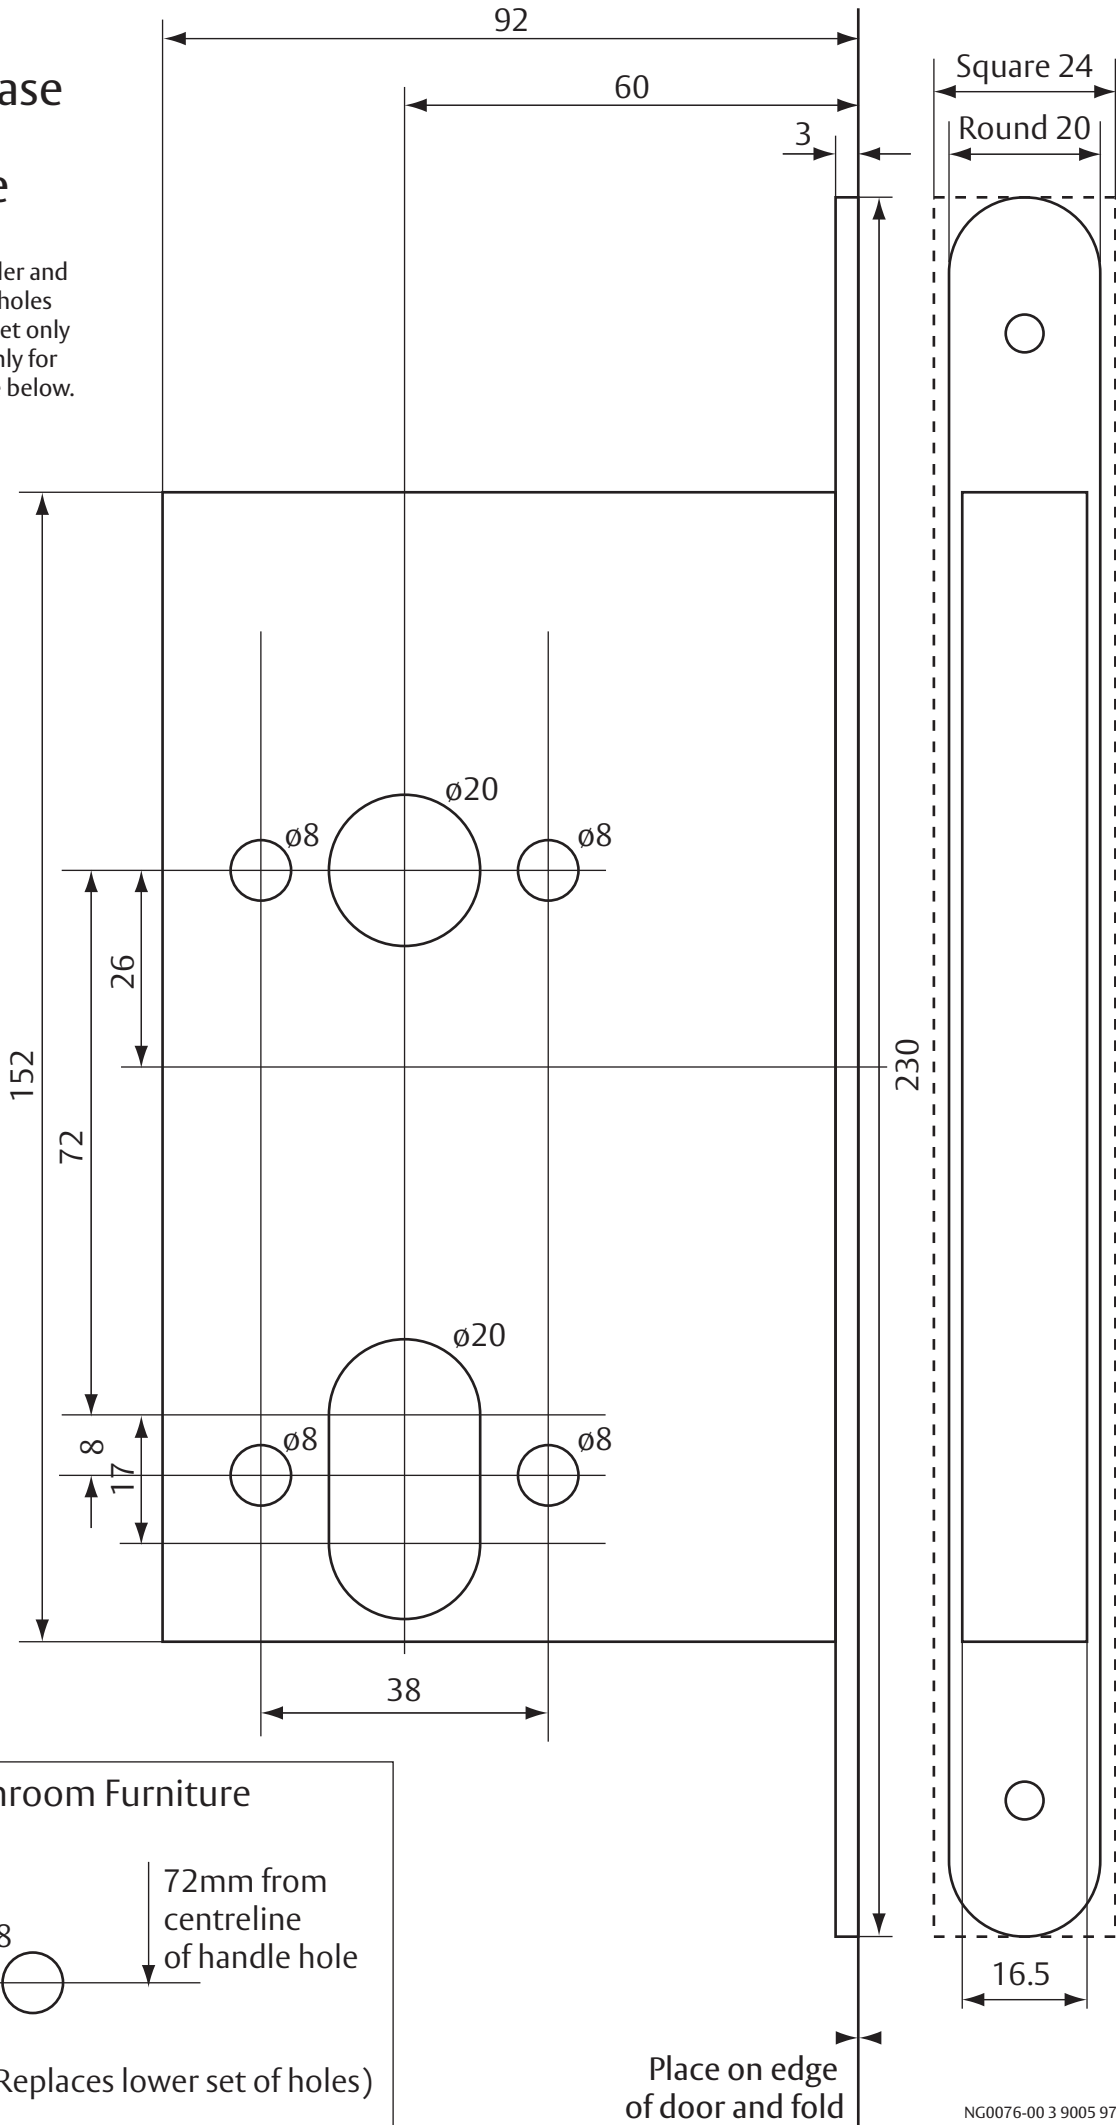

#### Preparation for Bathroom Furniture

